



## TR12S

Pos. Ref.	Codice Code		Caratteristiche Features	Descrizione Description	
1	SL0134	●		Pestello	Pusher
2	SL0136			Tramoggia	Hopper
3	SL0140			Albero	Shaft
4	SL0139		∅25x∅40x7	Paraolio	Oil seal
5	SL0131		6203 2RS	Cuscinetto	Bearing
6	SL0138	●		Pomello	Knob
7	SL2917	●		Tappo	Tap
8	SL3000			Bocchettone	Sleeve
9	SL0132		∅40	Seeger	Seeger
10	SL0130			Ingranaggio	Gear
11	SA3700		Assembly	Bocchettone	Sleeve
12	SL0125			Ingranaggio	Gear
13	SL0124			Albero	Shaft
14	SA1014		400V/3Ph/50Hz	Statore	Stator
14	SA1015		230V/1Ph/50Hz	Statore	Stator
15	SL0128			Ingranaggio	Gear
16	SL0127		∅17x∅40x7	Paraolio	Oil seal
17	SA7300		400V/3Ph/50Hz	Rotore	Rotor
17	SA7400		230V/1Ph/50Hz	Rotore	Rotor
18	SL0186			Calotta	Calotte
19	SL2833			Coperchio	Cover
20	SL1841		3Ph+Gnd	Cavo elettrico	Electric cable
20	SL1671		1Ph+N+Gnd	Cavo elettrico	Electric cable
21	SL1668		PG11	Pressacavo	Cable clamp
22	SL0142		Stainless-steel	Bocchettone	Sleeve
22	SL3078		Food stuff treated steel	Bocchettone	Sleeve
23	SA5300	●	Stainless-steel	Elica	Screw shaft
23	SA5350		Food stuff treated cast-iron	Elica	Screw shaft
24	SL2521			Perno	Pivot
25	////////	●		Coltello	Cutter
26	////////	●		Piastra	Plate
27	SL0171		Stainless-steel	Volantino	Handwheel
27	SL3327R0		Aluminium	Volantino	Handwheel
28	SL0180			Recipiente	Container
29	SL2566			Base	Base
30	SL0891	●	Start-stop	Pulsante	Push button
31	SL0177		16µF	Condensatore	Condenser
32	SL0176			Staffa	Bracket
33	SL0883	●		Scheda elettronica	Electronic card
34	SL0235			Piedino	Foot
35	SL2651			Fondo	Bottom
36	SL0054			Interruttore	Switch

(\*) : fuori produzione / out of production

● : ricambio consigliato / spare part suggested