



230VAC 1P 50Hz

LO SCHEMA RAPPRESENTA L'IMPIANTO IN POSIZIONE DI SPENTO
 LO SCHEMA REPRESENTS L'INSTALLATION ENPOSITION DE STOP
 THE DRAWING SHOWS THE PANEL ON "STOP" POSITION
 DAS SCHEMA ZEIGT DIE ANLAGE AUSGESCHALTET

 Prima di intervenire sull'apparecchiatura, scollegare l'alimentazione elettrica - Unplug the power supply before operating on the appliance Bevor am Gerät arbeiten ausschalten sré die elektrische speisung Avant d'intervenir sur l'appareil, déconnectez l'alimentation électrique - Desconnectar el alimentación antes cualquier intervención sobre el aparato		data: 25/05/2006		CODICE	
		nome: P.L.		251.707.00	
 S. VENDEMIANO (TV)		LAVASTOVIGLIE / DISWASHER GESCHIRRSPÜLMASCHINEN LAVE-VAISSELLE / LAVAVAJILLAS	MODELLO ECO 51 ECO 52	mod.: /	FOGLIO: 1/1
Pof.(kW)	/ volt(VAC)	/ ampere(A)	/ hertz(Hz)		