



230VAC 1P 50Hz

**LO SCHEMA RAPPRESENTA L'IMPIANTO IN POSIZIONE DI SPENTO**  
**LO SCHEMA REPRESENTS L'INSTALLATION ENPOSITION DE STOP**  
**THE DRAWING SHOWS THE PANEL ON "STOP" POSITION**  
**DAS SCHEMA ZEIGT DIE ANLAGE AUSGESCHALTET**

Prima di intervenire sull'apparecchiatura, scollegare l'alimentazione elettrica - Unplug the power supply before operating on the appliance Bevor am gerät arbeiten ausschalten sré die elektrische speisung Avant d'intervenir sur l'appareil, déconnectez l'alimentation électrique - Disconnecter el alimentación antes cualquier intervención sobre el aparato			
 S. VENDEMIANO (TV)	LAVASTOVIGLIE / DISWASHER GESCHIRRSPÜLMASCHINEN LAVE-VAISSELLE / LAVAVAJILLAS	/ <b>MODELLO</b> ECO 51 ECO 52	data: 25/05/2006 nome: P.L. mod.: / <b>251.707.00</b>
	Pof.(kW) / volt(VAC) / ampere(A) / hertz(Hz) /	<b>FOGLIO: 1/1</b>	